



Standalone-Gang8 S/W Update method

V1.00

2009. 3.24.Tue

Contents


I. Connect to external equipments	3
II. Install setup S/W	4
III. Execute the Gang8 S/W	5

I. Connect external equipments

Standalone-Gang8 hardware architecture is based on IBM compatible PC.
And, its operating system (OS) is Embedded XP of Microsoft™.

When you update Standalone-Gang8 S/W, some equipments are necessary as follow.

- Monitor and its cable
- Keyboard or Mouse (Mouse is better than Keyboard. Key board is option)
- Data storage or network adaptor : USB memory stick or USB LAN, etc.

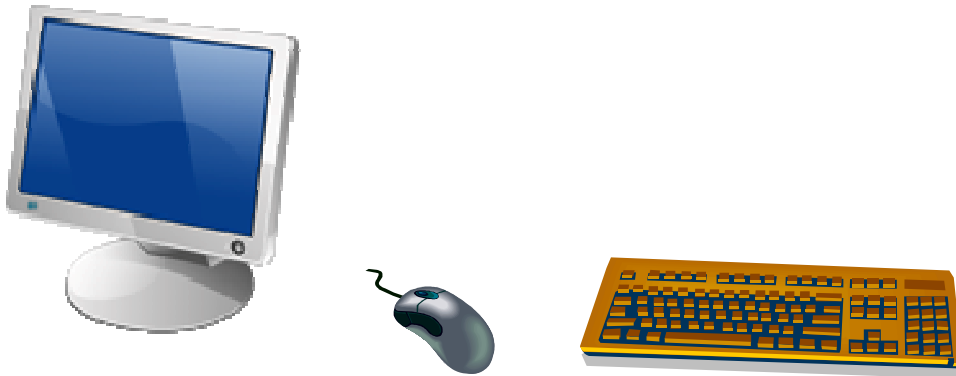

Ex) Example of fully connected system's photo
Do you think the Standalone-Gang8 resemble to PC?
Absolute right! Standalone-Gang8 is a PC.



Connect monitor cable and mouse to back plate of Standalone- Gang8.

Ex) Standalone-Gang8's back plate



II. Install setup S/W

Close Standalone-Gang8 application S/W first.
Click "X" or "Close" button of the dialog box.

If you do not close this S/W, you can not install update S/W.

Ex) Gang8 application screen shot



Connect internet site of our company (<http://www.abov.co.kr/>), and select Standalone-Gang8 section.
Download update program.
As you know, newer program can support more devices.

Copy the downloaded program to USB memory stick.
And connect it to Standalone-Gang8's USB port.
Wait until Standalone-Gang8 recognizes it.
Execute the downloaded Setup program.

Setup program's name format means as following.

Ex) Setup_sGang8_V101.exe

- Setup : it means setup S/W
- sGang8 : it means Standalone-Gang8 program
- V101 : it means S/W version (Version 1.01)

CAUTION

Standalone-Gang8 does not include virus vaccine.
So, Standalone-Gang8's direct internet connection is very harmful.
We will ask the charge of OS when the standalone-Gang8's OS is destroyed by user or virus.

So, we recommend that you had better to use other PC to download or virus check.

III. Execute the Gang8 S/W

If the installation was completed, you can execute The Standalone-Gang8 application S/W as following methods.

- Double click and execute the ICON on the desk top, or use start menu.
- Re-boot the Standalone-Gang8 system.